


PRODUTO: GXW42xx.

Dúvida: Como realizar configuração de fax nos gateways FXS em modo Pass-Trough?

Importante: Se a linha de fax vai ser usada sempre para envio/recebimento de fax, é recomendado ativar a opção "Disable Line Echo Canceller" na aba Profile-> Audio Settings-> Analog Line Settings conforme imagem abaixo salve e aplique as alterações.

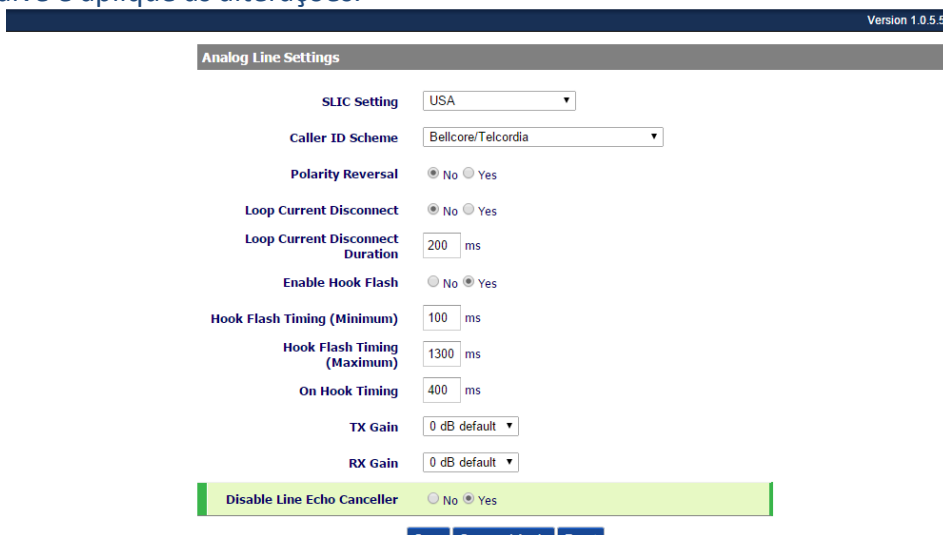

Version 1.0.5.5

Analog Line Settings

SLIC Setting: USA

Caller ID Scheme: Bellcore/Telcordia

Polarity Reversal: No Yes

Loop Current Disconnect: No Yes

Loop Current Disconnect Duration: 200 ms

Enable Hook Flash: No Yes

Hook Flash Timing (Minimum): 100 ms

Hook Flash Timing (Maximum): 1300 ms

On Hook Timing: 400 ms

TX Gain: 0 dB default

RX Gain: 0 dB default

Disable Line Echo Canceller: No Yes

Save Save and Apply Reset

Configuração:

Acessar interface web do gateway na aba Profile-> Fax Settings e configure conforme imagem abaixo salve e aplique as alterações.



Grandstream Status Maintenance Advanced Settings Profiles FXS Ports Version 1.0.5.5

Fax Settings

Profiles: Profile 1

- General Settings
- Network Settings
- SIP Settings
- Fax Settings
- Audio Settings
- Call Settings
- Call Features Settings
- Ring Tones

Profile 2

Fax Mode: T.38 (Auto Detect) Pass-Through

Fax Tone Detection Mode: Caller Callee Caller or Callee

Send Re-INVITE After Fax Completion: No Yes

Send Re-INVITE After Fax Tone: No Yes

Enable Silence Detection for Fax Disconnect: No Yes

Save Save and Apply Reset

Responsável: Departamento de RMA

Elaborado em 05/01/2015