

 
Overview

CAUTION


Failure to follow these instructions could result in damage to the product and void the factory warranty.

The accuracy of the door preparation is critical for the proper functioning and security of this product. Misalignment can cause performance degradation and a lessening of security. This product has two types of modes and user can change it for purpose of use.


All PIN code number is 6 to 12 digits.

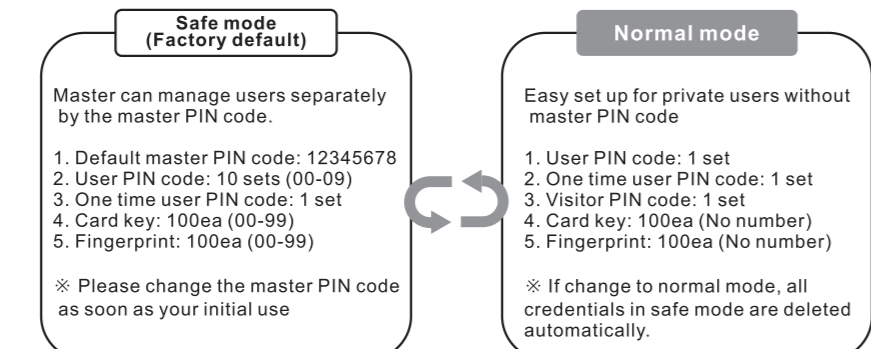


Safe mode → Normal mode

 

Normal mode → Safe mode

 


Specifications

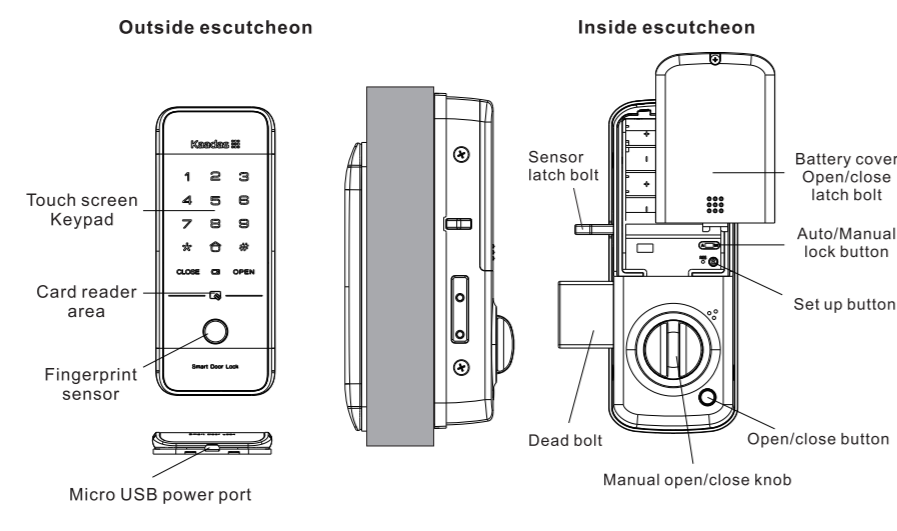 

Item	Specifications	Remarks
Outside escutcheon	172mm(D) x 71mm(W) x 13mm(H)	Operating temperature: 15~60°C
Inside escutcheon	200mm(D) x 77mm(W) x 48(H)mm	
Battery	4ea 1.5AA alkaline batteries (Operating voltage: 4.5~6.0V)	Last up to one year (10 times open/close per day)

 Quick setup guide



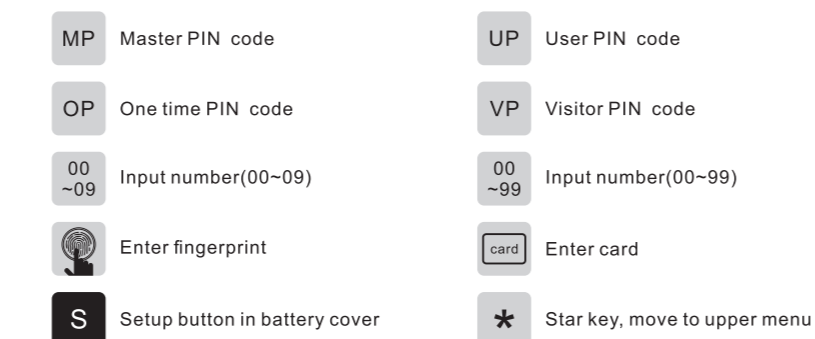


Safe mode (Factory default)


1. Modify master PIN code



   2. User settings



 3. User deleting

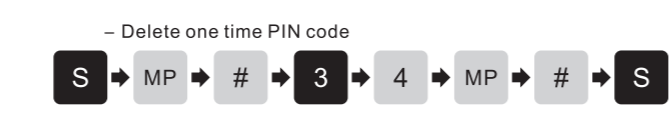

Safe mode (Factory default)

4. System settings

 
Change to normal mode



If change to normal mode, all credentials in safe mode are deleted automatically.

Master PIN code is not available in the normal mode.

Volume settings




1 Mute 2 Low volume 3 High volume




1 English 2 Spanish 3 Portuguese 4 Chinese

Factory default language is English.

 
5. Function extension

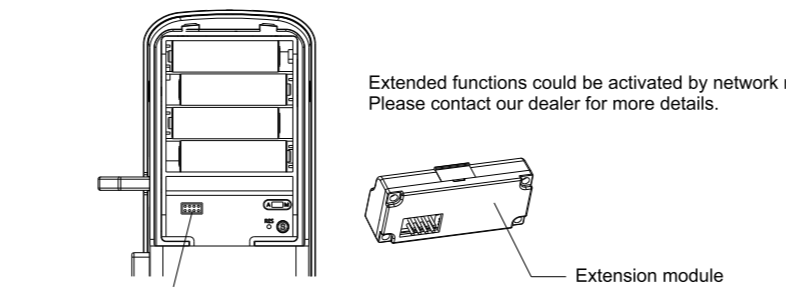

Join network

 

Quit network

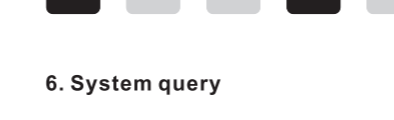 

6. System query



After operation, electrical serial number will be notified by voice guide.

To prevent forgery and transshipping, this product has electrical serial number in MCU.

Quick setup guide

1. User settings

Modify user PIN code



Add user fingerprint



 
Add user card



Add one time PIN code



Add visitor PIN code



2. User deleting

 
Delete all user fingerprint




Delete all user card




Delete one time PIN code



Delete visitor PIN code

 


Delete all credentials

 

3. System settings

 Change to safe mode



If change to safe mode, all credentials in normal mode are deleted automatically.

Volume settings



1 Mute 2 Low volume 3 High volume

Normal mode

 
Language settings



1 English 2 Spanish 3 Portuguese 4 Chinese

Factory default language is English.


5. Function extension

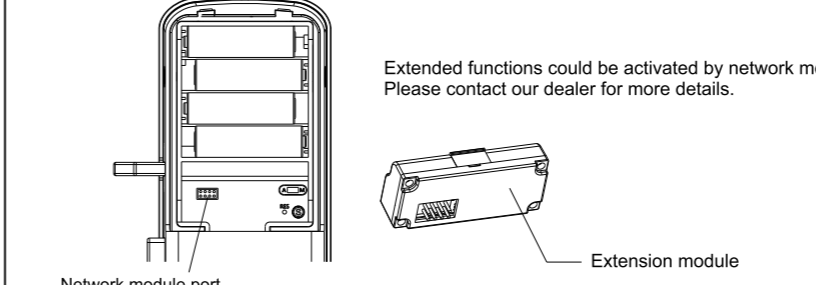


Join network



 Quit network

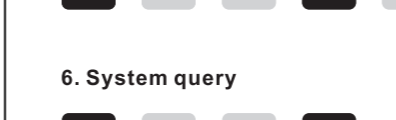

 6. System query




After operation, electrical serial number will be notified by voice guide.

To prevent forgery and transshipping, this product has electrical serial number in MCU.


How to use

Unlock the door

 
1. Unlock the door from outside




Use fingerprint

 

Use card key

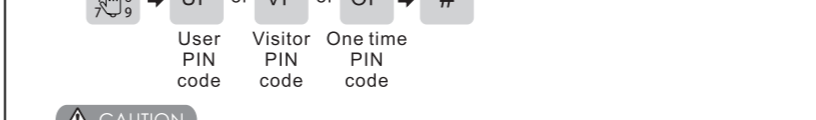 

Use PIN code key

 

As more than two number areas are touched, the keypad can be waked up. Please use your palm to wake up keypad.

 
1. Unlock the door from inside



Use fingerprint



Use card key



Use PIN code key

 


As more than two number areas are touched, the keypad can be waked up. Please use your palm to wake up keypad.


How to use

Unlock the door

1. Open/close button



 
2. Manual open/close knob



Lock the door


1. Lock the door from outside

 Auto mode



In Auto mode, the door is locked automatically.

 
Manual mode

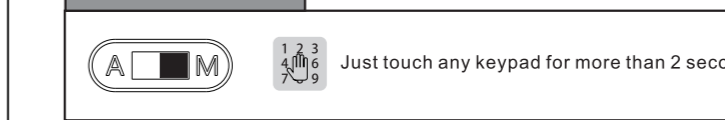

Just touch any keypad for more than 2 seconds


2. Lock the door from inside

 Auto mode



In Auto mode, the door is locked automatically.

 
Manual mode



In Manual mode, the door is locked by pushing Open/close button or turning the knob.

Forced lock the door

 1. Forced lock the door from outside




As locking the door, touch this button 3 seconds, and the door is forcedlocked from outside.

If any opening from inside, door lock is alarming.

As any normal opening from outside, this alarm mode is cleared.

 2. Forced lock the door from inside



As locking the door, push Open/close button for 3 seconds, and any type of opening verification from outside is not available.

 
If any normal opening from inside, this mode is cleared.

Safety & convenience feature


3 minutes lock down

As any consecutively wrong operating 10 times from outside, door lock is locked down for 3 minutes.

As any normal opening from inside, this lock-down mode is cleared.

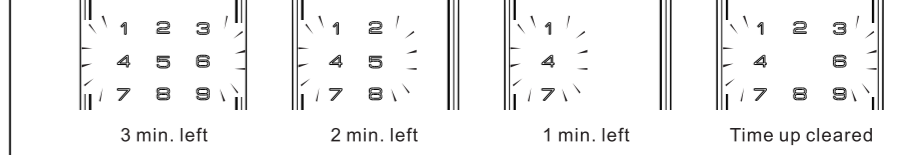


Intrusion / breaking alarm

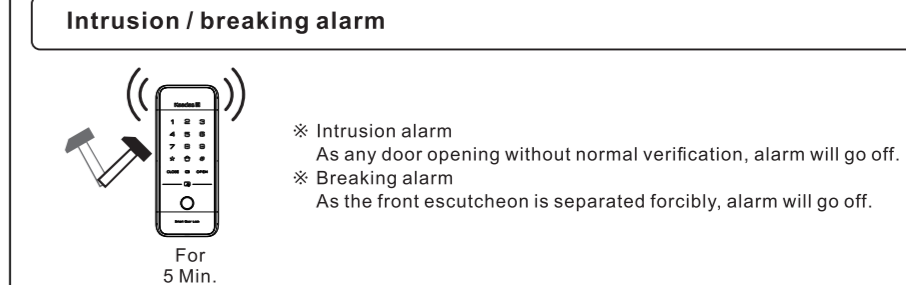 

Intrusion alarm
As any door opening without normal verification, alarm will go off.

Breaking alarm
As the front escutcheon is separated forcibly, alarm will go off.

 Unlock with Fake PIN code

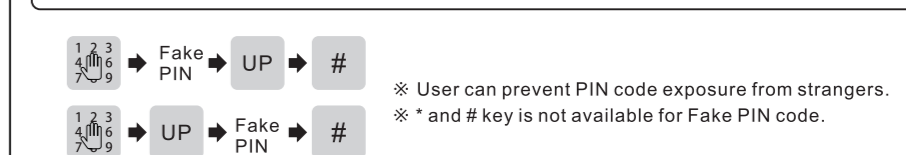


Fake PIN → UP → #

User can prevent PIN code exposure from strangers.


* 1 and # key is not available for Fake PIN code.

 One time silent mode opening



User can open the door without any sound in the mid-night.

 Micro USB emergency power supply

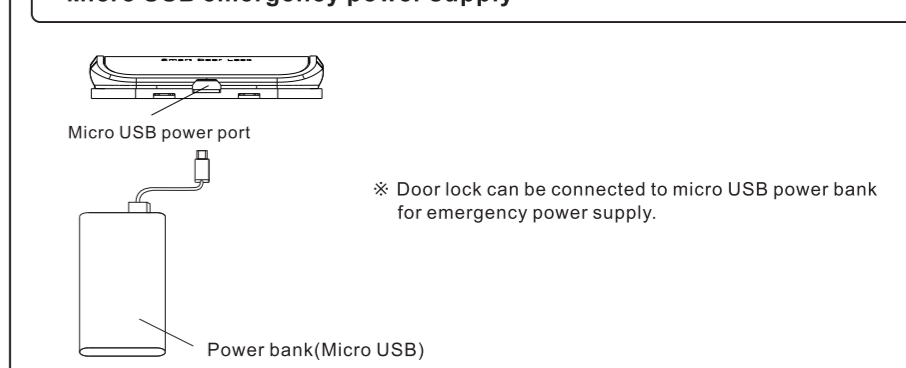

Door lock can be connected to micro USB power bank for emergency power supply.

纸张: 128g铜版纸双面单黑印刷

工艺: 风琴7折, 折后尺寸125*265mm