

Extensão de linhas analógicas

Configuração de extensão de linhas analógicas sobre IP com os GATEWAYS FXO & FXS.



**Descrição:** No diagrama, usuários remotos em Fortaleza tem telefones analógicos conectados ao GXW400x (portas FXS), enquanto no escritório de São Paulo há um PBX tradicional, com troncos analógicos ligados ao gateway GXW410x (portas FXO). Com a ajuda da infraestrutura de rede IP e GXW Grandstream Gateway FXO e FXS, os usuários remotos em Fortaleza podem fazer e receber chamadas a partir de São Paulo, como se estivessem fisicamente lá. Esta é uma configuração muito popular onde não é exigida a utilização de um servidor SIP ou PABX IP. O método permite que uma empresa tenha acesso remoto aos troncos FXO (Linhas Tronco PABX ou PSTN) através da rede IP.

**Recomendações:** Para que esse cenário funcione corretamente, é extremamente importante que ambos os equipamentos estejam localizados na mesma LAN ou que tenham IPs públicos e estáticos, para que um "veja" o outro. Para o cenário de extensão de ramais (PABX), a tensão que a central injeta no GXW tem que ser de, no mínimo, 60V. Caso haja o problema de o telefone conectado no FXS não tocar quando recebe uma ligação mas consegue fazer, esse é o problema, ou seja, a tensão é inferior a 60V.

Este documento descreve dois cenários:

- 1. Um-a-Um (o usuário pode selecionar a porta de destino)
- 2. Porta-a-porta (as portas são mapeadas de forma permanente: porta FXO n para porta FXS n).



#### 1º Passo, configuração de rede para Gateway FXO

• Precisamos fixar IP na porta WAN do Gateway

Fändstream	Status	Accounts	Settings	Networks	Maintenance	FXO Lines	Line Analysis
							Version: 1.4.1.5
Networks	Basic Se	ettings					
Basic Settings	IP Address:	O dynamically a	ssigned via DHC	P or PPPoE if co	onfigured		
Date & Time		DHCP hostna	ume (Option 12):			]	
		DHCP dom	ain (Option 15):			]	
	D	HCP vendor class	ID (Option 60):	Grandstream G	XW4104	]	
		PP	PoE account ID:			]	
		PPPoE ac	count password:			]	
		PPPoE service	e name (option):			]	
		Prefer	red DNS server:	0.	0.	0	. 0
	Г	statically confi	igured (default) a	ls:			
			IP Address:	192 .	168 .	10	. 62
			Subnet Mask:	255 .	255 .	255	. 0
			Default Router:	192 .	168 .	10	. 254
			DNS Server 1:	192 .	168 .	10	. 254
			DNS Server 2:	192 .	168 .	0	. 1

2º Passo, configuração de rede para Gateway FXS

• Precisamos fixar IP na porta WAN do Gateway



	Grandstream Device Configuration							
STATUS BA	SIC SETTINGS	ADVANCED SI	TTINGS	PRO	FILE 1	PROFILE 2	FXS PORTS	
End User Password:			(pur	posely no	ot displa	yed for secu	urity protection)	
Web Port:	80 (0	default for HTTP i	s <mark>80</mark> )					
Telnet Server:	🔿 No 🛛 💿	Yes						
IP Address:	O dynamical	ly assigned via DH	СР					
	DHCP	hostname:					(optional)	
	DHCP	vendor class ID:	HT500				(optional)	
	o use PPPo	E						
	PPPoE	account ID:						
	PPPoE	password:						
	PPPoE	Service Name:				- <b>T</b>		
	Preferred DN	IS server: 0	. 0	.0	. 0	T	_	
	statically c	onfigured as:						
	IP Add	ress:	192	.168	.10	. 64		
	Subnet	Mask:	255	. 255	. 255	.0		
	Default	Router:	192	.168	.10	. 254		
	DNS S	erver 1:	192	.168	.10	. 254		
	DNS S	erver 2:						

• Na aba BASIC SETTINGS vá na opção DEVICE MODE e selecionar a opção BRIDGE.

NAT/DHCP Server Information & Configuration:								
Device Mode:	NAT Router	Bridge						



3º Passo, configuração o Gateway FXO

• Na aba FXO LINES ir na opção AC Termination Impedance

Preencher com ch1-4:0;

	FXO Termination	
Enable Current Disconnect(Y/N):	ch1-4:Y;	(default Y-yes)
Current Threshold:	ch1-4:100;	if yes(5~65530,default 100ms)
<b>Enable Tone Disconnect:</b>	ch1-4:N;	(default No; Yes - busy tone)
<b>Enable Polarity Reversal:</b>	ch1-4:N;	(default No; Consult carrier)
Enable Call Supervision:	ch1-4:N;	(default No; Consult carrier)
Silence Timeout(X1s):	ch1-4:60;	(default 60s)
Incoming Ring Timeout(X1s):	ch1-4:6;	(2-10s, default 6s)
AC Termination Impedance:	ch1-4:0;	(0-15, default 0)
	AC Termination Impedance Values (0-1 0 - 600 Ohm (North American) 1 - 900 Ohm 2 - 270 Ohm + (750 Ohm    150nF) and 3 - 220 Ohm + (820 Ohm    120nF) and 4 - 370 Ohm + (620 Ohm    310nF) 5 - 320 Ohm + (1050 Ohm    230nF) 6 - 370 Ohm + (820 Ohm    110nF) 7 - 275 Ohm + (78 Ohm    150 nF) 8 - 120 Ohm + (820 Ohm    110 nF) 9 - 350 Ohm + (1000 Ohm    210nF) 10 - 0 Ohm + (900 Ohm    30nF) 11 - 600 Ohm + 2.16 uF	5, default 0) 275 Ohm + (780 Ohm    150nF) 220 Ohm + (820 Ohm    115nF)

**OBS.:** essa tela acima é de um **GXW de 4 portas**. Caso você esteja fazendo a configuração em um de 8 portas, ficará: **ch1-8:1**;

• Na aba CHANNELS vá até a opção Call Progress Tones

No campo Dial Tone preencher com a seguinte informação:

ch1-4:f1=425@-11,f2=0@-11,c=0/0;

No campo Ringback Tone preencher com a seguinte informação:

ch1-4:f1=425@-11,f2=0@-11,c=200/400;

No campo Busy Tone preencher com a seguinte informação:

ch1-4:f1=425@-11,f2=0@-11,c=50/50;

No campo Reorder Tone preencher com a seguinte informação:

ch1-4:f1=480@-11,f2=620@-11,c=25/25;



					0		
GXW410X PSTN Gateway						Log	gout Reboot
Grändstream	<u>Status</u>	Accounts	<u>Settings</u>	Networks	Maintenance	FXO Line	25 Line Analysis
							Version: 1.4.1.5
FXO Lines	FXO Set	tings					
Settings				Call Progress	lones		
Dialing		[Syntax: ch x-y: :	f1=val@vol,f2=v	al@vol,c=on1/off	1-on2/off2-on3/o	off3;]	
	1	Note: f1 f2-frequ	encv(Hz): vol-vo	lume(dB): c-cade	nce(10ms, 0-cont	tinuous)	-
			Dial Tone:	ch1-4:f1=425@-1	1,f2=0@-11,c=0/0	);	
			Ringback Tone:	ch1-4:f1=425@-1	1,f2=0@-11,c=20	0/400;	
			<b>Busy Tone:</b>	ch1-4:f1=425@-1	1,f2=0@-11,c=50	/50;	
			Reorder Tone:	ch1-4:f1=480@-1	1,f2=620@-11,c=	25/25;	
				Port Voice Set	tting		
		Tx to PSTN A	Audio Gain(dB):	ch1-4:1;		(-	12-12, default 1)
	1	Rx from PSTN A	Audio Gain(dB):	ch1-4:0;		(-12-1	12, default 0)
		Silence Su	ppression(Y/N):	ch1-4:Y;		(defai	ult Yes)
		Echo Ca	ncellation(Y/N):	ch1-4:Y;		(defai	ult Yes)

• E na opção Channel Setting, no campo DTMF Methods: preencher com ch 1-4:1;1

GXW410X PSTN Gateway						Logout	Reboot
Grändstream	Status	Accounts	Settings	Networks	Maintenance	FXO Lines	Line Analysis
							Version: 1.4.1.5
Settings	Channels	Settings					
General Settings							
Call Settings			\$	SIP Channel S	etting		
Channels Settings							
	DTM	Methods(1-7):	ch1-4:1;		(default	: 1)	
			(1:in-audio, 2:RI	C2833, 3:1+2, 4	:SIP Info, 5:1+4, 6:	2+4, 7:1+2+4)	
	No Key Entry	Timeout(X1s):	ch1-4:4;		(1-9, de	fault 4)	
	Local S	IP Listen Port:	ch1-4:5060++;		(default	ch1-8:5060++	·)
	SF	TP Mode(1-3):	ch1-4:1;		(default	: 1)	
			(1:disabled, 2:en	abled but not for	ed, 3:enabled and t	forced)	
				Calling to V	oIP		
	Unconditio	onal Call Forwar	rd to Following:				
		User ID:	ch1-4:;		(i	.e ch1-2:223;cl	n3:224)
		SIP Server:	ch1-4:p1;		(0	:h1-2:p1;ch3:p2	2)
	SIP D	estination Port:	ch1-4:5060;		(0	ch1-2:5060;ch2	:7080)



**OBS.:** essa tela acima é de um **GXW de 4 portas**. Caso você esteja fazendo a configuração em um de 8 portas, ficará: **ch1-8:2**;

#### 4º Passo, configuração o Gateway FXS

• Vá até a aba **PROFILE X** (que vai depender do profile que você irá utilizar)

jrom SIF Froxy Only:	
Use Privacy Header:	🖲 Default 💿 No 💿 Yes
Use P-Preferred-Identity Header:	🖲 Default 💿 No 💿 Yes
SIP T1 Timeout:	0.5 sec 🔻
SIP T2 Interval:	4 sec 🔻
SIP Timer D:	0 (0 - 64 seconds. Default 0)
DTMF Payload Type:	101
Preferred DTMF method:	Priority 1: RFC2833 -
(in listed order)	Priority 2: In-audio 👻
	Priority 3: SIP INFO -

5º Passo, configurando as extensões da (s) linha (s). Gateway FXS.

• Vá até a aba **Profile X** (Profile que foi escolhido acima)

SIP Server: Colocar o IP do Gateway FXO.

SIP Registration: selecionar a opção "No".

Outgoing Call without Registration: selecione a opção "Yes".

NAT traversal: selecionar a opção "No"



#### Extensão de linhas analógicas Grandstream Device Configuration PROFILE **STATUS** BASIC SETTINGS ADVANCED SETTINGS PROFILE 2 FXS PORTS Profile Active: No Yes Primary SIP Server: 192.168.10.62 (e.g., sip.mycompany.com, or IP address) Failover SIP Server: (Optional, used when primary server no response) (yes - will register to Primary Server if Failover registration O Yes No Prefer Primary SIP Server: expires) **Outbound Proxy:** (e.g., proxy.myprovider.com, or IP address, if any) SIP transport: ODP TCP TLS (default is UDP) NAT Traversal: ◎ STUN O UPnP No Keep-Alive

Yes

Yes

۲

Yes

SRV

NAPTR/SRV

O Use Configured IP

Outgoing Call without Registration: No Yes

Disabled

No

No

No

A Record

3

Clique em UPDATE para salvar as configurações.

Use Request Routing ID in SIP INVITE Header:

Clique em REBOOT para que as configurações sejam aplicadas corretamente.

DNS Mode:

Primary IP: Backup IP1: Backup IP2: Tel URI:

SIP Registration:

Unregister On Reboot:

Vá na aba Basic Settings

Reply to ICMP on WAN port: selecione a opção "Yes"

WAN side HTTP/Telnet access: selecione a opção "Yes"

Enable LAN DHCP: selecione a opção "No"



NAT/DHCP Server Information & Configuration:							
Device Mode:	NAT Router      Bridge						
NAT maximum ports:	1024 (range: 0 - 4096, default is 1024)						
NAT TCP timeout:	3600 (range: 0 - 3600, default is 3600)						
NAT UDP timeout:	300 (range: 0 - 3600, default is 300)						
Uplink bandwidth:	Disabled 👻						
Downlink bandwidth:	Disabled 👻						
Enable UPnP support:	◉ No  ◎ Yes						
Reply to ICMP on WAN port:	No Section Yes (Unit will not respond to PING from WAN side if set to No)						
WAN side HTTP/Telnet access:	No						
White list for WAN side:							
Black list for WAN side:	.i.						
Cloned WAN MAC Addr:	(in hex format)						
Enable LAN DHCP:	No O Yes						

Clique em **UPDATE** para salvar as configurações.

Clique em **REBOOT** para que as configurações sejam aplicadas corretamente.

6º Passo, configurando as extensões da (s) linha (s). Gateway FXO.

• Vá na aba Settings, na opção General Settings.

STUN Server: deixar em branco



M CTWOIN	3	LAtenbuo	ue minu	s analogi	lub			
GXW410X PSTN Gateway						Logout	Reboot	
Grändstream	Status	<u>Accounts</u>	Settings	Networks	<b>Maintenance</b>	FXO Lines	Line Ana Versior	<b>lysis</b> 1: 1.4.1.5
Settings	General	Settings						
General Settings		Use NAT IP:			(if specified, this v	will be used in §	SIP/SDP me	essage)
Call Settings		STUN Server:			(URI or IP:port)			
Channels Settings	STUN Kee	p-alive Interval:	20		] ( in seconds, defai	ult 20 )		
			Save	Cancel				
					All Rights Reserved	Grandstream Ne	tworks, Inc.	2004-2012
• Vá na aba Setti	i <b>ngs,</b> na op	oção <b>Call S</b> e	ettings.					

Use Random Port: selecione a opção "No"

GXW410X PSTN Gateway	Logout Reboot
Grändstream	Status Accounts Settings Networks Maintenance FXO Lines Line Analysis Version: 1.4.1.5
Settings	Call Settings
General Settings	<b>G723 Rate:</b> • 6.3kbps encoding rate • 5.3kbps encoding rate
Call Settings	Voice Frames per TX: 2 (up to 10/20/32/64 for G711/G726/G723/other codecs respectively)
Channels Settings	DTMF Payload Type: 101
	local RTP port: 5004 (1024-65535, default 5004)
	Use random local RTP port: <ul> <li>No</li> <li>Yes (default No)</li> </ul>
	RTP Loopback:  No O Yes (Yes means no RTP streams between 2 internal Line ports)
	Save
	All Rights Reserved Grandstream Networks, Inc. 2004-2012

Clique em SAVE para salvar as configurações.



• Na aba FXO lines verificar as opções:

Wait for Dial Tone: selecione a opção "N"

Stage Method: selecione a opção "1"

GXW410X PSTN Gateway						Logout	Reboot		
Grändstream	<u>Status</u>	Accounts	<u>Settings</u>	Networks	Maintenance	FXO Lines	Line Analysis Version: 1.4.1.5		
FXO Lines	Dialing								
Settings Dialing				Dialing to PS1	ſN				
		Wait for Di	al-Tone(Y/N):	ch1-4:N;		(default	No)		
		Stage	e Method(1/2):	ch1-4:1;		(default	2 stage dialing)		
	М	in Delay Befor	e Dialing Out:	ch1-4:500;		(default	500ms, 50 ~ 65000ms)		
			P	ort Scheduling S	chema				
	I	Round-robin ar	nd/or Flexible:	rr:1-4;		(defa	ult rr:1-8;)		
				(Syntax: rr: port	_group; []; Defa	ult: rr:1-8; roun	d-robin of all ports )		
		Prefix to	Specify Port:	99		(1 stage dial, o	lefault 99)		
			t	(Syntax: prefix# + ch# + dialing# will request the ch# per call. Note that this code has to prefix dialplan number and prefix doesn't impact round-robin)					
	Use S	IP User Accour	nt Scheduling:	${\small \bullet \ No} \ {\small \bigcirc \ Yes}$					

(Note that Yes disables above 2 scheduling, which is not recommanded)



### **Unconditional Call Forward to VOIP:**

User ID: ch1-4:444; (ou ch1-8:444; se for o de 8 portas)

SIP Server: ch1-4:p1; (ou ch1-8:p1; se for o de 8 portas)

SIP Destination Port: ch1-4:5060++; (ou ch1-8:5060++; se for o de 8 portas)

				Version: 1.4.1.5
Settings	Channels Settings			
General Settings				
Call Settings		SIP Channel Setting		
Channels Settings				
	DTMF Methods(1-7):	ch1-4:1;	(default 1)	
		(1:in-audio, 2:RFC2833, 3:1+2, 4:SIP Info	, 5:1+4, 6:2+4, 7:1+2+4)	
	No Key Entry Timeout(X1s):	ch1-4:4;	(1-9, default 4)	
	Local SIP Listen Port:	ch1-4:5060++;	(default ch1-8:5060++;)	
	SRTP Mode(1-3):	ch1-4:1;	(default 1)	
		(1:disabled, 2:enabled but not forced, 3:ena	abled and forced)	
		Calling to VoIP		
	Unconditional Call Forwa	rd to Following:		
	User ID:	ch1-4:444;	(i.e ch1-2:223;ch3:2	224)
	SIP Server:	ch1-4:p1;	(ch1-2:p1;ch3:p2)	
	SIP Destination Port:	ch1-4:5060++;	(ch1-2:5060;ch2:70	80)

Clique em **SAVE** para salvar as configurações.



SIP Server: Colocar o IP do Gateway FXS

GXW410X PSTN Gateway						Logout	Reboot
Grändstream	Status 🛛	Accounts	<u>Settings</u>	<u>Networks</u>	Maintenance	FXO Lines	Line Analysis Version: 1.4.1.5
Accounts	General Set	tings					
Account 1							
General Settings	Acc	ount Active: (	Yes ONo				
Networks Settings	Ac	count Name:	GXW40xx		(Optional, name	e of your profile	e)
SIP Settings		SIP Server:	192.168.10.64		(Server domain	name or IP add	lress)
Audio Settings	Outbo	ound Proxy:			(Domain name	or IP address if	in use)
Call Settings							
Account 2							
Account 3							
User Account							
			Save	I			
				,	All Rights Reserved	Grandstream Net	tworks, Inc. 2004-2012

## SIP Registration: selecione a opção "No"

GXW410X PSTN Gateway					Logout	Reboot
Grandstream	Status Accounts	<u>Settings</u>	Networks	<u>Maintenance</u>	FXO Lines	Line Analysis Version: 1.4.1.5
Accounts	SIP Settings					
Account 1			_			
General Settings	SIP Registration:	⊖Yes				
Networks Settings	Unregister On Reboot:	⊖Yes ®No				
SIP Settings	<b>Register Expiration:</b>	60 (in min	utes. default 1 h	iour, max 45 days)		
Audio Settings	SIP Reg Failure Retry Wait:	20 (in sec	onds. Between	1-3600, default is 2	:0)	
Call Settings	SIP Transport:	• UDP OT	CP			
Account 2	Session Expiration:	180 (in seco	onds. default 18	0 seconds)		
Account 3	Min-SE:	90 (in seco	onds. default and	d minimum 90 seco	onds)	
User Account	Caller Request Timer:	⊖Yes ●No (	Request for time	er when making ou	tbound calls)	



NAT traversal: selecione a opção "No"

GXW410X PSTN Gateway					Logout	Reboot
$\mathcal{O}_{\mathcal{A}}$						
Trandstream	Status Accounts	Settings	Networks	Maintenance	FXO Lines	Line Analysis
						Version: 1.4.1.5
Accounts	Networks Settings	5				
Account 1						
General Settings	Use DNS SRV:	⊙No OYes	S			
Networks Settings	NAT Traversal (STUN):	⊙ No O No	o, but send keep-a	alive OYes		
SIP Settings	Proxy-Require:			(content for SIP Pr	roxy-Require he	eader)
Audio Settings	Use OBP in Route:	●No ○Yes	s			
Call Settings						
Account 2						
Account 3						
User Account						
		Save	ancel			
				All Rights Reserved	Grandstream Ne	etworks, Inc. 2004-2012

**Lembre-se:** Para que esta configuração funcione corretamente, os gateways devem estar na mesma rede ou em redes com IPs públicos. Ou até mesmo na mesma rede local, remotamente por VPN.



## Extensão de linhas analógicas Cenário 1

Mapeando Uma-a-uma as portas FXS e FXO

Se a sua aplicação requer que o usuário da porta FXS 1 (exemplo) tenha acesso para chamadas saíntes na porta FXO 1 (exemplo), use a seguinte configuração na página Channels no GXW410x:

Por padrão de fábrica, o valor é 99.

Esta configuração permite enviar chamadas saíntes a uma porta específica do FXO.

• Na aba FXO Lines, depois na opção Dialing, em Port Scheduling Schema, Prefix to specify Port

GXW410X PSTN Gateway						Logout	Reboot		
Grändstream	Status	Accounts	<u>Settings</u>	Networks	Maintenance	FXO Lines	Line Analysis Version: 1.4.1.5		
FXO Lines	Dialing								
Dialing				Dialing to PS	TN				
		Wait for I	Dial-Tone(Y/N):	ch1-4:N;			(default No)		
		Stage Method(1/2): ch1-4:2; (default 2 s							
	1	Min Delay Befo	Delay Before Dialing Out: ch1-4:500; (default 500ms, 50 ~ 6500						
			Pe	ort Scheduling S	Schema				
		Round-robin a	and/or Flexible:	rr:1-4;		(defai	ult rr:1-8;)		
				(Syntax: rr: port	group; []; Defa	ault: rr:1-8; round	d-robin of all ports )		
		Prefix	Prefix to Specify Port: 99 (1 stage dial, default 99)						
			t	(Syntax: prefix# + ch# + dialing# will request the ch# per call. Note that this code has to prefix dialplan number and prefix doesn't impact round- robin)					
	Use	SIP User Acco	unt Scheduling:	$\odot$ No $\bigcirc$ Yes					

(Note that Yes disables above 2 scheduling, which is not recommanded)



João está no escritório de Fortaleza (**GXW400x**), na porta **FXS 1** e precisa fazer uma chamada para Alice no escritório de São Paulo no número **5566-9300** através da porta **FXO 4**.

João deve digitar **99-4-5566-9300**, o que fará que a chamada seja direcionada para a porta FXO 4 somente.

**Obs.** '99'. Representa o prefixo, '4' representa o número da porta.

O gateway GXW400x FXS tem a opção de plano de discagem (plano de discagem), isso permite que você configure todas as chamadas com o prefixo (como padrão, 99) automaticamente. Dessa forma, basta discar 1-566-9300. O GXW400x Gateway adiciona automaticamente o '99 'antes de discar.



### Cenário 2

#### Mapeando Porta-a-porta entre portas FXS e portas FXO

O mapeamento porta-a-porta permite que as chamadas da porta X do FXS sejam completadas na porta X FXO. Este esquema é parecido com o mapeamento um-a-um, porém as chamadas serão sempre encaminhadas para a mesma porta. O usuário não precisa digitar nenhum dígito extra como no exemplo anterior.

O mapeamento porta-a-porta é configurado pelo dial-plan do GXW400x. Ele suporta \$P, onde \$P se refere ao número da porta.

Mapeamento porta-a-porta é assim configurado:

• Configurando o Gateway FXO (GXW41xx)

Na aba FXO Lines, depois na opção Dialing, em Port Scheduling Schema, Prefix to specify Port

GXW410X PSTN Gateway						Logout	Reboot			
Grandstream	Status	Accounts	Settings	Networks	Maintenance	FXO Lines	Line Analysis			
							Version: 1.4.1.5			
FXO Lines	Dialing									
<u>Settings</u>										
Dialing				Dialing to PS	ſN					
		Wait for I	Dial-Tone(Y/N):	ch1-4:N;		(default	No)			
		Stag	ge Method(1/2):	ch1-4:2;		(default	(default 2 stage dialing)			
	Μ	lin Delay Befo	re Dialing Out:	ch1-4:500;		500ms, 50 ~ 65000ms)				
			P	ort Scheduling S	chema					
	]	Round-robin :	and/or Flexible:	rr:1-4;		(defai	ılt rr:1-8;)			
				(Syntax: rr: port	group; []; Defa	ult: rr:1-8; round	l-robin of all ports )			
		Prefix to Specify Port: 99 (1 stage dial, default 99)								
			t	(Syntax: prefix# + ch# + dialing# will request the ch# per call. Note that this code has to prefix dialplan number and prefix doesn't impact round-robin)						
	Use S	IP User Acco	ant Scheduling:	◉ No ○ Yes						
				(Note that Yes d	isables above 2 so	heduling, which	is not recommanded)			



Na aba **FXO Lines**, depois na opção **Dialing**, em **Dialling to PSTN**, no campo **Stage Method**, preencher com **1**.

GXW410X PSTN Gateway						Logout	Reboot
Grändstream	<u>Status</u>	Account	s <u>Settings</u>	Networks	Maintenance	FXO Lines	Line Analysis Version: 1.4.1.5
FXO Lines	Dialing						
<u>Settings</u>							
Dialing				Dialing to PST	ΓN		
		Wait	for Dial-Tone(Y/N):	ch1-4:N;		(default	No)
			Stage Method(1/2):	ch1-4:1;		(default 2	2 stage dialing)
		Min Delay	Before Dialing Out:	ch1-4:500;		(default :	500ms, 50 ~ 65000ms)

• Configurando o Gateway FXS (GXW40xx)

Vá até a ABA PROFILE X (depende da porta a ser utilizada), na opção Dial Plan, preencher com o seguinte dados:

#### { <=99\$P>x+ }

Use # as Dial Key: Yes (if set to Yes, "#" will function as the "(Re-)Dial" key) No Dial Plan: { <=99\$P>x+ } 6 SUBSCRIBE for MWI: No, do not send SUBSCRIBE for Message Waiting Indication Yes, send periodical SUBSCRIBE for Message Waiting Indication

**Exemplo:** Se João quer ligar para o número **(041) 3123-4567** de seu telefone na porta **FXS 5**, ele não deve digitar nenhum número extra. A chamada será enviada para a porta **5 do FXO**.

Internamente no **GXW400x**, o número é modificado automaticamente com o DIAL-PLAN em questão: **99504131234567**. O Gateway **GXW4108** (neste exemplo), envia a chamada para a porta **5 do FXO**, e removerá '995' para enviar pelo tronco **PSTN** o número originalmente digitado.