


*Como configurar a tecla Flash nos gateways GXW42xx Séries.*

- 1° Habilitar a opção Enable Hook Flash.
- 2° Na opção Hook Flash Timing (minimum) setar 40ms.
- 3° Na opção Hook Flash Timing (maximum) setar 1100ms.
- 4° Na opção On Hook Timing setar o valor 300ms.

Exemplo:

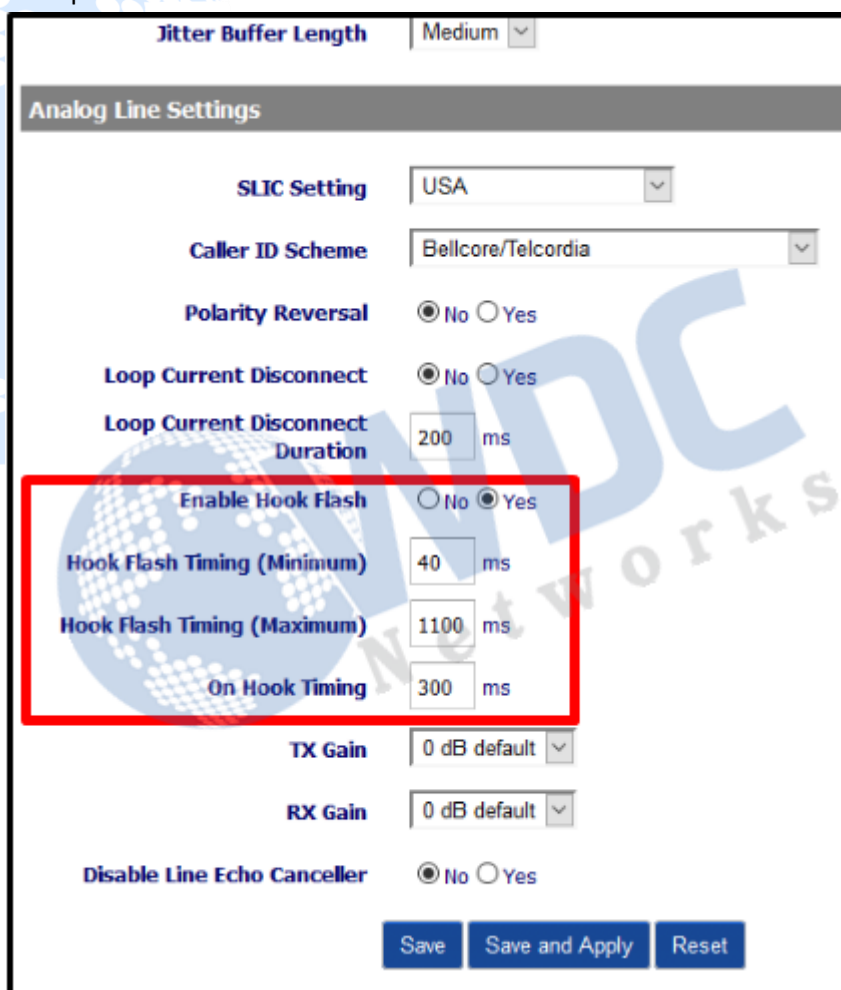

The screenshot shows the configuration interface for a Grandstream gateway. At the top, 'Jitter Buffer Length' is set to 'Medium'. Below this is the 'Analog Line Settings' section. The 'SLIC Setting' is 'USA', and the 'Caller ID Scheme' is 'Bellcore/Telcordia'. There are radio buttons for 'Polarity Reversal', 'Loop Current Disconnect', and 'Disable Line Echo Cancellor', all set to 'No'. The 'Loop Current Disconnect Duration' is set to 200 ms. A red box highlights the following options: 'Enable Hook Flash' (radio button set to 'Yes'), 'Hook Flash Timing (Minimum)' (input field set to 40 ms), 'Hook Flash Timing (Maximum)' (input field set to 1100 ms), and 'On Hook Timing' (input field set to 300 ms). Below these are 'TX Gain' and 'RX Gain' both set to '0 dB default'. At the bottom are 'Save', 'Save and Apply', and 'Reset' buttons.