

FIBARO

Home intelligence



IP de fabrica
VERSÃO 4.540

Colocando a central com IP de fabrica

Colocar a central em IP de fabrica é um procedimento usado para acessar a central a partir de um computador sem usar um roteador. Essa função é usada em casos de emergência para trocar o IP da central uma vez que foi trocado o range do roteador.

Como colocar a central em IP de fabrica?


1. Verifique se os 2 leds indicativos da central estão ligados.



2. Conectar uma das pontas do cabo de rede no notebook e a outra na central.



Abrir a configuração de rede do notebook e configurar conforme a imagem abaixo:

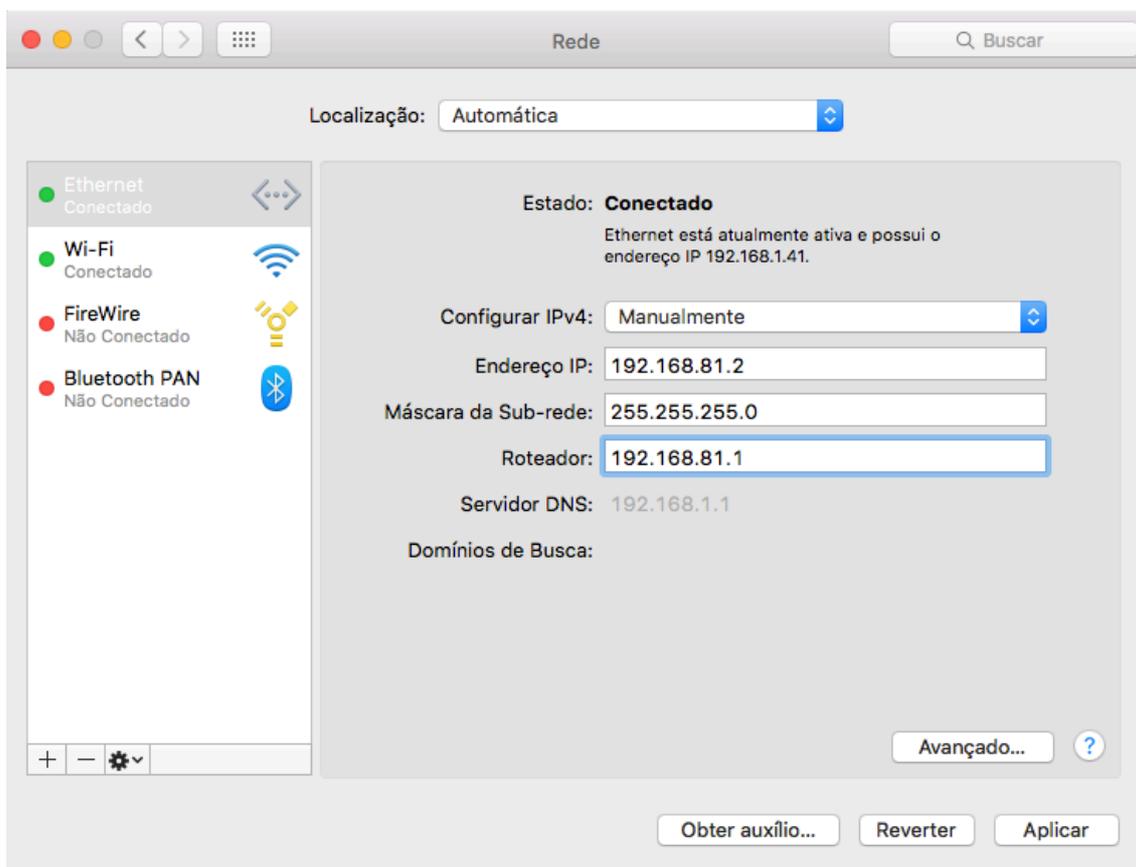

4. Pressionar por 5 segundos o botão + que esta localizado atrás da central.




5. Após pressionar, o led indicativo da internet vai começar a piscar.



6. Abrir o navegador e digitar o IP: 192.168.81.1



7. Inserir o usuário e senha da central.

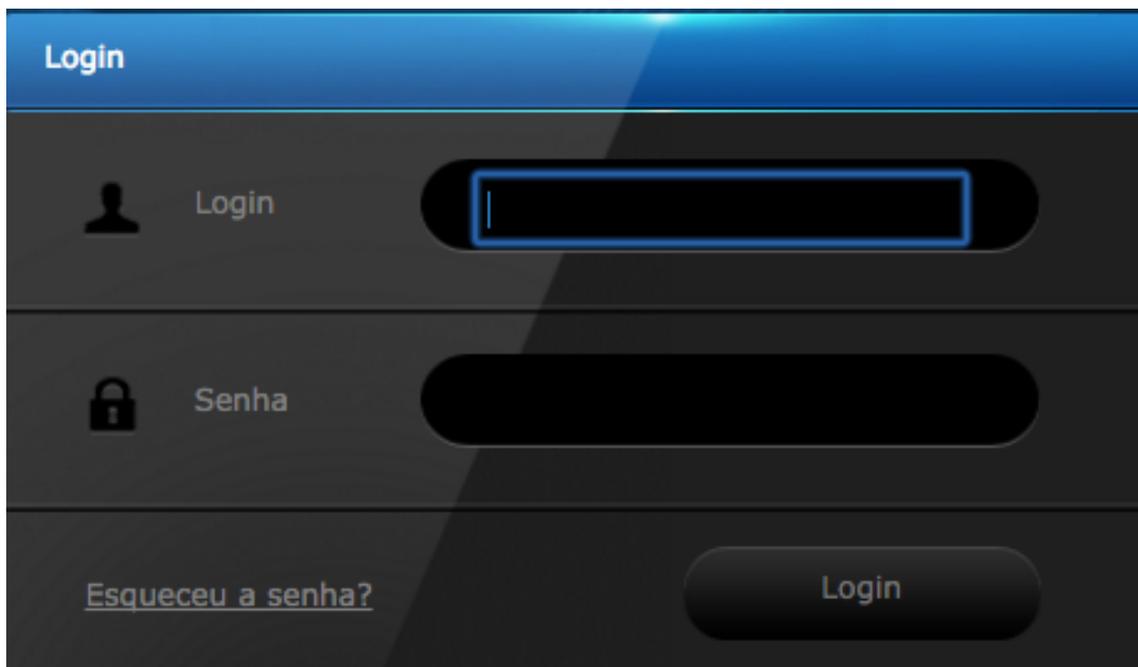A screenshot of the login interface for the FIBARO Home Center 2. The interface has a dark grey background with a blue header bar at the top containing the word "Login" in white. Below the header, there are two input fields: the first is labeled "Login" with a person icon and has a blue border around it; the second is labeled "Senha" with a lock icon. At the bottom left, there is a link that says "Esqueceu a senha?". At the bottom right, there is a "Login" button.